

# 1, 2, 3, **VOTE**!

## Voting with the ES&S iVotronic


### 1 **ACTIVATE BALLOT**

You or a pollworker will activate your electronic ballot by inserting it into the appropriate slot. Next, touch language of choice with your finger.




### 2 **SELECT CANDIDATE**

To select your candidate, touch the box next to the name. To de-select, touch box again. The iVotronic will not allow you to vote for more people than may be elected to any one office.

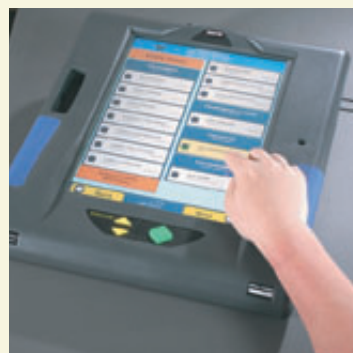


Touch "Next" in lower right corner to navigate forward through the ballot.

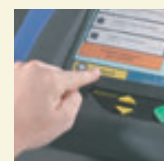

Touch "Back" in lower left corner to navigate backward through the ballot.

### 3 **A. REVIEW BALLOT**

After completing last ballot page, touch "Review" and carefully review the selection review screen. To change or make a new choice, touch box next to candidate or office name, and then touch box next to new selection.

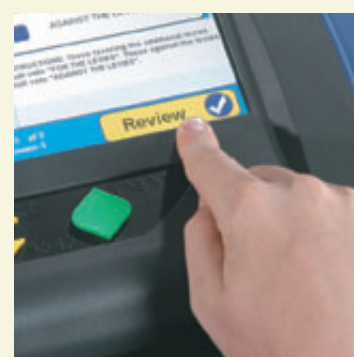


### **B. REVIEW VOTER VERIFIABLE RECORD**

# **VOTE**!

When finished, press the flashing red "Vote" button to cast your ballot.

"Thank You For Voting" screen means you have properly cast your ballot.

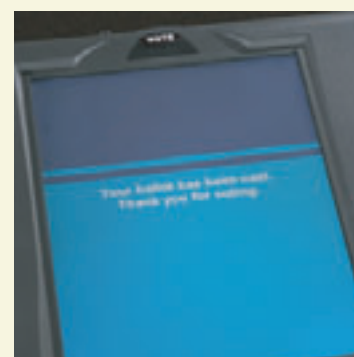

## Election Systems & Software

MAINTAINING VOTER CONFIDENCE.  
ENHANCING THE VOTING EXPERIENCE.



EXPERIENCE  
RELIABILITY  
SECURITY  
INNOVATION